


## HOME COMFORT

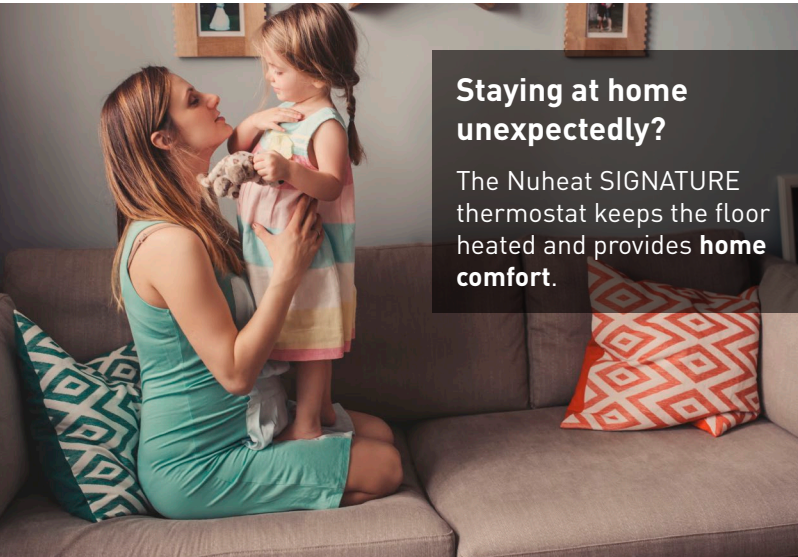

### Staying at home unexpectedly?


The Nuheat SIGNATURE thermostat keeps the floor heated and provides **home comfort**.



### Getting home early?


The Nuheat SIGNATURE thermostat will automatically turn on your floor heating system once you've arrived home for optimal **home comfort**.

## SAVE ENERGY

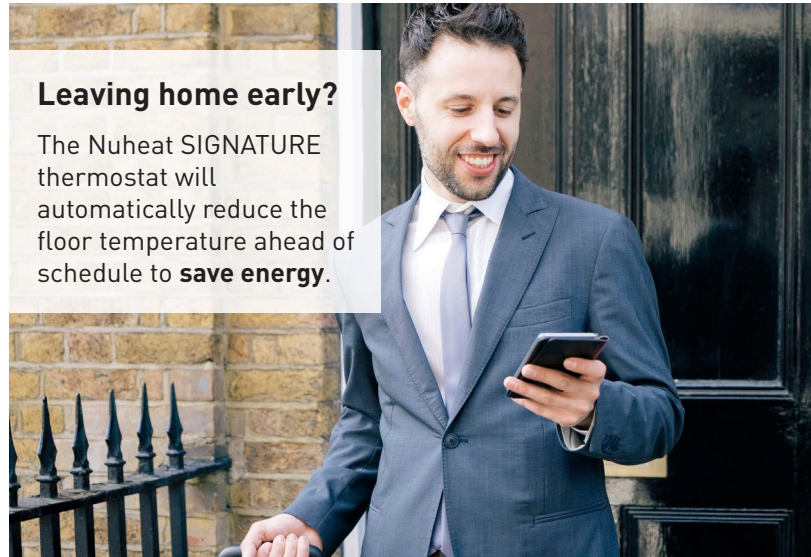

### Leaving home early?

The Nuheat SIGNATURE thermostat will automatically reduce the floor temperature ahead of schedule to **save energy**.

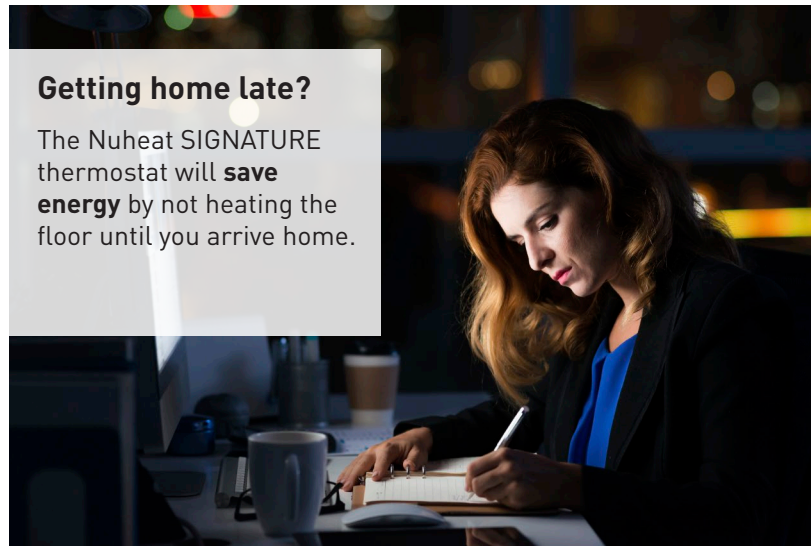

### Getting home late?

The Nuheat SIGNATURE thermostat will **save energy** by not heating the floor until you arrive home.

Nuheat SIGNATURE  
WIFI-ENABLED  
FLOOR HEATING THERMOSTAT  
NOW WORKS WITH NEST





## TECHNICAL SPECIFICATIONS

- Resistive Load:
  - 1800 W max @120VAC (15 amp)
  - 3600 W max @240VAC (15 amp)
- Dual-Voltage:
  - 120V/240V (incl. 208V)
- Built-in GFCI
- No battery required
- 3-year manufacturer's warranty

## SETUP AND SYSTEM REQUIREMENTS

Follow these simple steps on your Nuheat SIGNATURE Thermostat and Nest to experience all the benefits this combination has to offer:

### MyNuheat.com

1. Group your SIGNATURE Thermostats (even for a single SIGNATURE thermostat)
  - Login to your MyNuheat.com account
  - Select edit groups, new group

### Nuheat SIGNATURE Thermostat

2. Set SIGNATURE to Auto Mode
  - On the thermostat, select Setup/Preferences, Operating Mode, and ensure you are set to Auto Mode (default)
3. Activate all four setpoints on SIGNATURE (Wake/Leave/Return/Sleep)
  - On thermostat, select Settings, Program/Schedule
  - Set higher temperatures for WAKE and RETURN setpoints
  - Set lower temperatures for LEAVE and SLEEP setpoints\*

\*IMPORTANT: At minimum, SLEEP setpoint in each day's schedule should be active and set to a lower temperature than the WAKE setpoint.

### Nest Thermostat

4. Nest Sense™ Auto-Away feature is enabled

### MyNuheat.com

5. Access Works With Nest Feature and begin setup
  - Login to your MyNuheat.com account, select Account Settings, Connect to Nest and follow instructions

For specifications and more information about the Nuheat SIGNATURE thermostat, please visit [www.nuheat.com](http://www.nuheat.com)



#### NORTH AMERICA

Tel: +1.800.778.9276  
 Fax: +1.604.529.4404  
[nuheatcustomercareteam@pentair.com](mailto:nuheatcustomercareteam@pentair.com)



[WWW.NUHEAT.COM](http://WWW.NUHEAT.COM)

Pentair and Nuheat are owned by Pentair or its global affiliates. All other trademarks are the property of their respective owners. Pentair reserves the right to change specifications without prior notice.

© 2016 Pentair.